Foot Analytics

iKnos Corporate

INSTALLATION GUIDE



RUCKUS APS
Integration Guide

iKnos Corporate by Foot Analytics


Last revision
November 2022

Configuration

In ***System > General Settings***

For configuring the integration with Ruckus APS, follow the next steps:

1. Click on **Access Points** on left menu.
2. When loaded, click the zone that you want to connect (2) and then press the edit button (3):

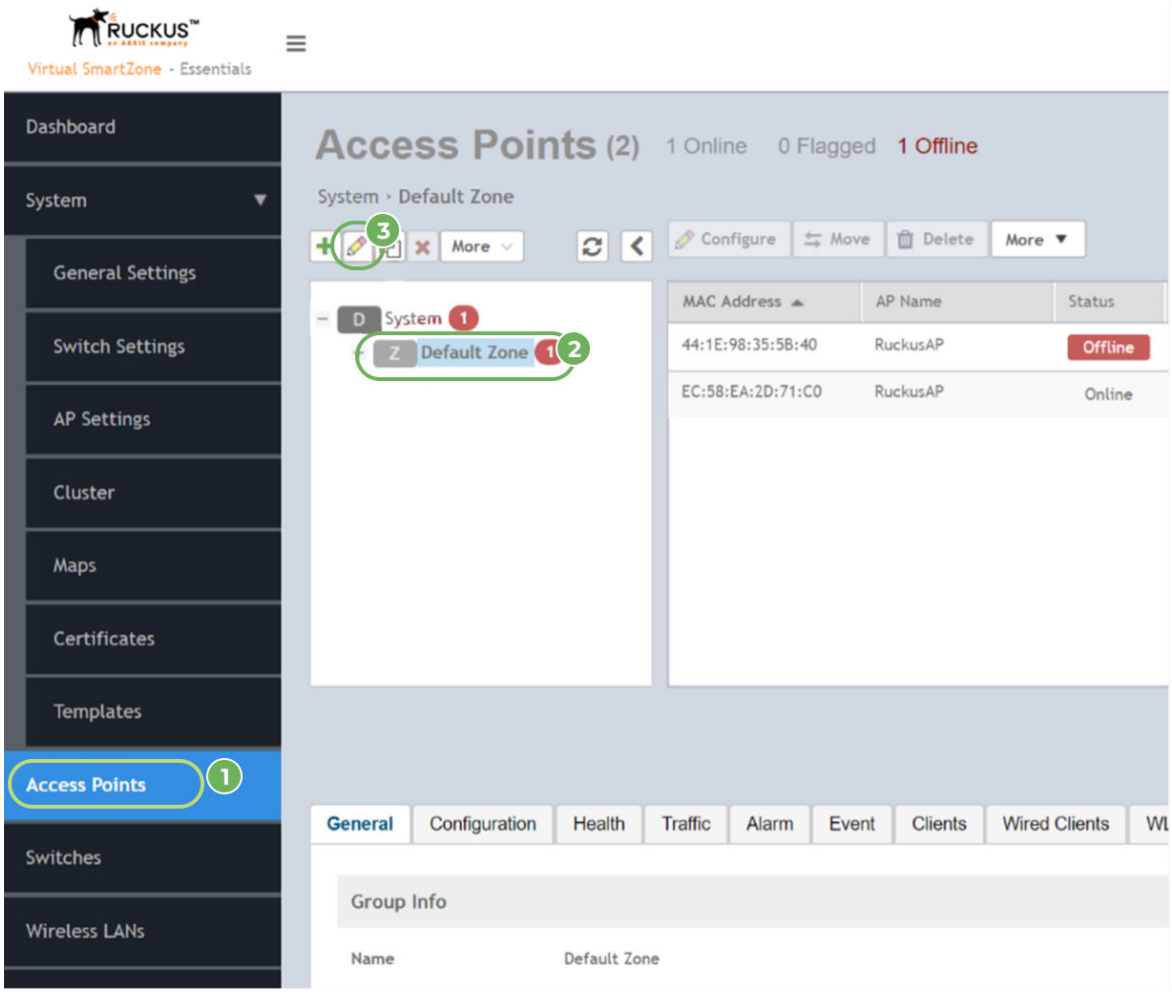

3. A settings pop-up will appear. Then you must go to the **Advanced Options**, enable the **Location Based Service** and select (or create) the venue.

